

# Installation and operating manual

## Electronic ignition system

# POWER SPARK

- Versions:**
- 1 cylinder  
RC-i 100, RC-i 120
  - 2 cylinders  
RC-i 200, RC-i 220  
(twin, 180° ignition offset)
  - 3 & 4 cylinders  
RC-i 400, RC-i 420  
(double-twin, 180° ignition offset)


**included:**

- POWER SPARK
- speed sensor
- magnet for speed sensor
- 2x bushings for speed sensor
- programming magnet
- installation and operating instructions

Dear customer,  
thank you for your purchase.

Please read the following instructions carefully, so you wouldn't have any difficulties to install and operate the POWER SPARK.

We wish you a successful installation and much pleasure using the POWER SPARK.

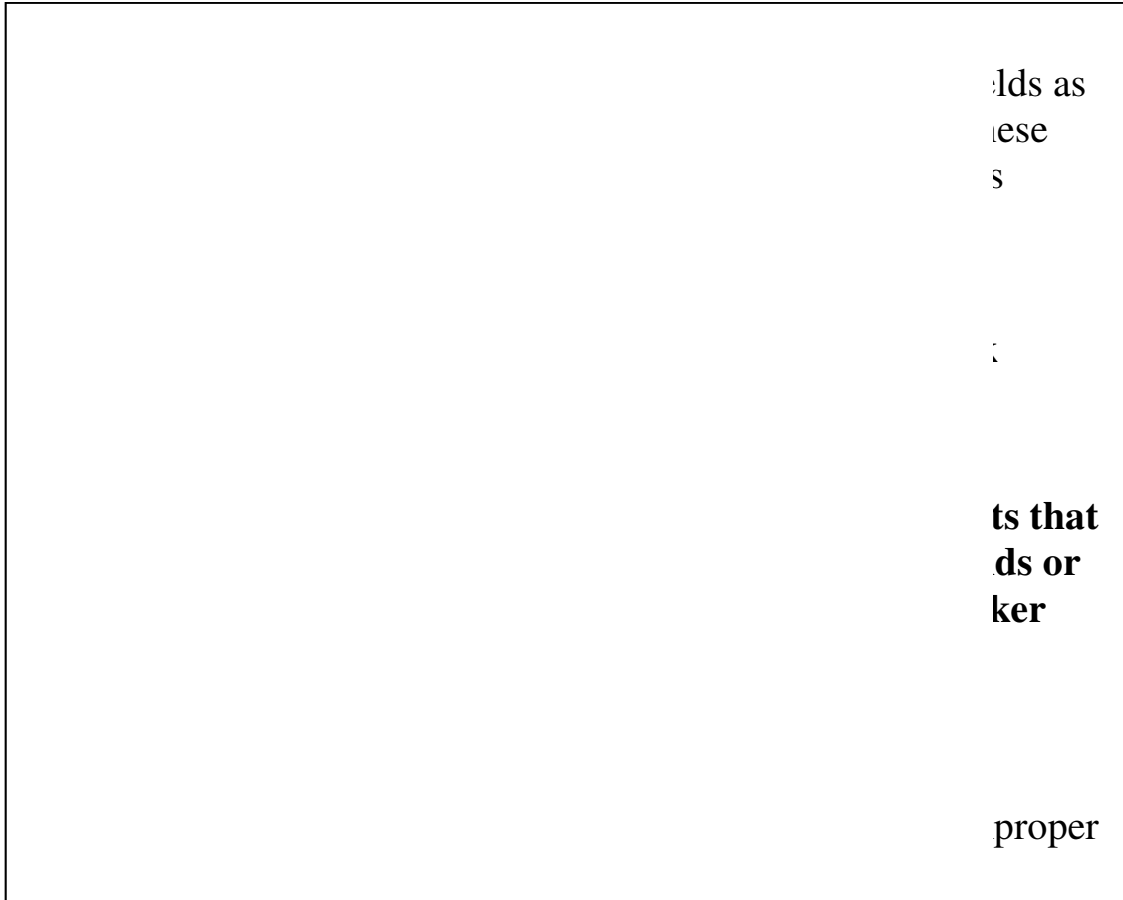

We are always interested in improvements and look forward to your feedback. Please contact:

**tne.systeme**

Dipl.-Ing. T. Niedermayer  
Alemannenstr. 7  
D-73457 Essingen  
GERMANY

Tel: +49 7365 9191-41  
email: [info@power-spark.de](mailto:info@power-spark.de)  
web: [www.power-spark.de](http://www.power-spark.de)



---

<sup>1)</sup> Only receiver control versions RC-i x2x. <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

# Features

## General

- micro controlled, high-precision electronic ignition system
- constant spark energy in the complete speed range
- spark energy independent from supply voltage, integrated voltage booster compensates voltage swing
- 2-digit brilliant red LED display
- simple installation and programming
- numerous possibilities to customize
- red anodized, waterproof aluminum housing
- speed up to 30000rpm with one or more cylinders<sup>2)</sup>
- display of the actual engine speed
- ignition starts at a minimum engine speed (safe start-up)
- separate ignition endstages<sup>2)</sup> => low power consumption when using multiple cylinders, (because additional cylinders ignite separately and not parallel to the first one)
- no need of an additional battery pack, ignition system can be powered from the receiver battery pack (min. 4 batt.= 4,8V)

## adjustment possibilities

- 9 pre-programmed ignition maps
- application of custom ignition map
- adjustable speed sensor angle (mechanical sensor offset)
- adjustable ignition energy (3 steps)

## diagnosis features

- display of maximum engine speed and battery voltage
- supervision of main battery voltage
  - low voltage warning (generation of ignition misses)
- engine stops if low voltage detected
- supervision of receiver battery voltage<sup>1)</sup>
- supervision of receiver servo signal<sup>1)</sup>
  - free definable supervision window
    - => engine stops if FAILSAFE-signal is detected
  - „killswitch“- functionality

---

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## **Backfitting an engine with magnetic ignition system**

The POWER SPARK ignition was designed in a way that the original magneto ignition can be replaced with few modifications.

This installation and operating instruction describes the modifications using the example of the ZENOAH-260-PUM- engine.

The modifications of other engines can be done in the same way; deviations can result in the geometry of the flywheel, the fitting of the speed sensor etc.

## **Advantages of the POWER SPARK**

Elimination of red primary ignition coil and flywheel with integrated magnets.

- smoother engine running, since the unsymmetrical magnetic brake torque for generating the ignition spark is eliminated
- allows the assembly of compact engines with more cylinders, because the prime-ignition coils are inapplicable.

Replacement of the original flywheel with integrated magnets.

- flywheel with increased inertia can be used (accessories)
  - ⇒ increased engine smoothness
  - ⇒ reduced idle speeds possible

The original secondary ignition coil(s) are used furthermore.

- Instead of the red primary ignition coil the POWER SPARK is connected to the secondary ignition coil.
  - ⇒ high voltage circuit only between secondary ignition coil and spark plug
  - ⇒ no high voltage at POWER SPARK
- secondary ignition coil(s) do not have to be mounted to the engine

---

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Quick way to success

The POWER SPARK has a lot of adjustment possibilities and functions. To ensure a fast assembly and initial startup, please act according to the following checklist.

### Assembly

- ☐ attend safety and assembly instructions p.05
- ☐ assemble POWER SPARK p.06
- ☐ assemble magnet of speed sensor into new flywheel p.07  
(if own flywheel is used)
- ☐ assemble speed sensor to engine p.07
- ☐ perform wiring p.10 / 11

### Programming

- ☐ check mechanical position of speed sensor p.30
- ☐ possibly adjust sensor angle of speed sensor p.29
- ☐ choose ignition map p.20

### Initial startup

- ☐ adjust speed limit p.27
- ☐ start engine and perform a test run
- ☐ possibly choose another ignition map p.20
- ☐ activate monitoring functions p.35

## **Safety and installation instructions**

Please read the following instructions carefully.

Please work carefully. Do not pull on cables or cable connections. Improper cable connections may result in cable fires by reason of short circuits.

Improper cable installations or cable connections may result in malfunction or damages to the components.

Correct positioning and connection of cables is essential for long term, error free function of the POWER SPARK.

The connector plugs of the sensor cable have adjustments, please notice that and plug in the connector very carefully to avoid damage of pins.

- Install the cables in zero potential state, disconnect all battery packs.
- Do not locate the cables near sharp edges or hot or moving parts, so that they cannot be damaged.
- To connect the cables use only suitable connectors. Make sure, that the cables have a good contact and that the conductive parts of the connector cannot be touched when connected.
- **Install the cables, especially the sensor cable and the cable to the RC-receiver as far as possible from the ignition coils to avoid interference.**
- **To avoid short circuit or damages of components isolate non-used cables with insulating band or insulating screw joints.**
- If possible, install the plug-in connectors at a suitable place where no splash water or other liquids like petrol or oil can reach them and keep care that they cannot detach from their place (use tape or cable binders).
- Please ask an expert if you have problems with the installation.

**We are not responsible for consequential damages by installing and using the POWER SPARK .**



---

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## **Assembly of the POWER SPARK**

Please note the following points when installing the POWER SPARK:

- **mechanic installation**

- the housing of the POWER SPARK can get hot when running the engine with high speeds over a long period  
=> do not install heat sensitive components near the POWER SPARK  
=> make heat dissipation possible (don't cover)  
=> install in an adequate distance to the engine
- install at a place with low vibration
- choose the position so that the display of the POWER SPARK can be read easily
- choose the position that the magnetic sensitive element for programming the POWER SPARK is accessible.  
(see programming)
- ensure a robust mechanical installation of the POWERSPARK  
(for example with special brackets for laminating)  
(accessories: assembly set, item-nr.: EB-1)
- the dimensions of the POWER SPARK and the distances of the fastening bores shows the scale on page 43.

- **electric installation**

- engines with more than one cylinder and engine speeds exceeding 20000rpm need battery packs with minimum 9V supply voltage
- keep the supply cables (red & black) as short as possible
- keep the cables to the ignition coils as short as possible
- don't place the cables to the ignition coils near signal cables  
(for example the cables to the servos)
- place the signal cable to the speed sensor and to the RC-receiver<sup>1)</sup> in an adequate distance to the ignition coils
- **fuse the plus cable of the POWER SPARK**  
(accessories: SI-3, SI-5, Si-10)
  - ⇒ **fuse 3A** (for versions RC-i 1xx)
  - ⇒ **fuse 5A / 10A** (for versions RC-i 2xx / RC-I 4xx)
- establish a **ground connection** from the engine to the battery minus with a cable of at least 1,5mm<sup>2</sup> cross section

---

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

## Installation of speed sensor

A precise ignition to the right time assumes the correct assembly of the speed sensor to the engine. The magnet and the speed sensor have to be installed in a way that, during a rotation, the speed sensor is triggered by the magnet 75° before reaching the top dead center. As the sensing magnet is surrounded by a magnetic stray field, the speed sensor will be triggered about 10° before passing the magnet mechanically. For this reason the sensing magnet must pass the speed sensor 65° before the top dead center. The value of the stray magnetic field about 10° applies to the shown geometry (see illustration). When installing the magnet on an increased radius the pre-triggering of the speed sensor decreases.

### Speed sensor

- Install speed sensor at an adequate place to the engine
  - Assemble the speed sensor with M3 screws. For protecting the strip conductors put the provided bushings under the screws. (see d)
  - the magnet in the flywheel and the speed sensor element have to be at the same level (see c,d)  
The exact adjustment can be made with the help of two 0,5mm-holes in the area of the speed sensor`s sensitive element, you can find the sensitive element in the middle of the connecting line between the two holes.
  - the speed sensor`s flattened side faces the flywheel (see d)
  - set the air gap between the speed sensor and the flywheel between 0,5mm - 1,5mm. (see d)

### magnet

- place the magnet (Ø3mm, length 4mm) into the flywheel in a way:
  - that it passes the speed sensor in direction of rotation 65° before reaching the top dead center (a,b) For checking the sensor angle use the menu „CS“ (p.30), and correct it with menu „SA“ (p. 29).
  - that the surface of the magnet is located max. 1mm under the surface of the flywheel (d)
  - that it is permanently fixed (for example use instant adhesive).The polarity of the magnet can be ignored.

---


<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.



## Detail description of magnet and speed sensor

- Presentation a,b: cylinder 1 is on top dead center

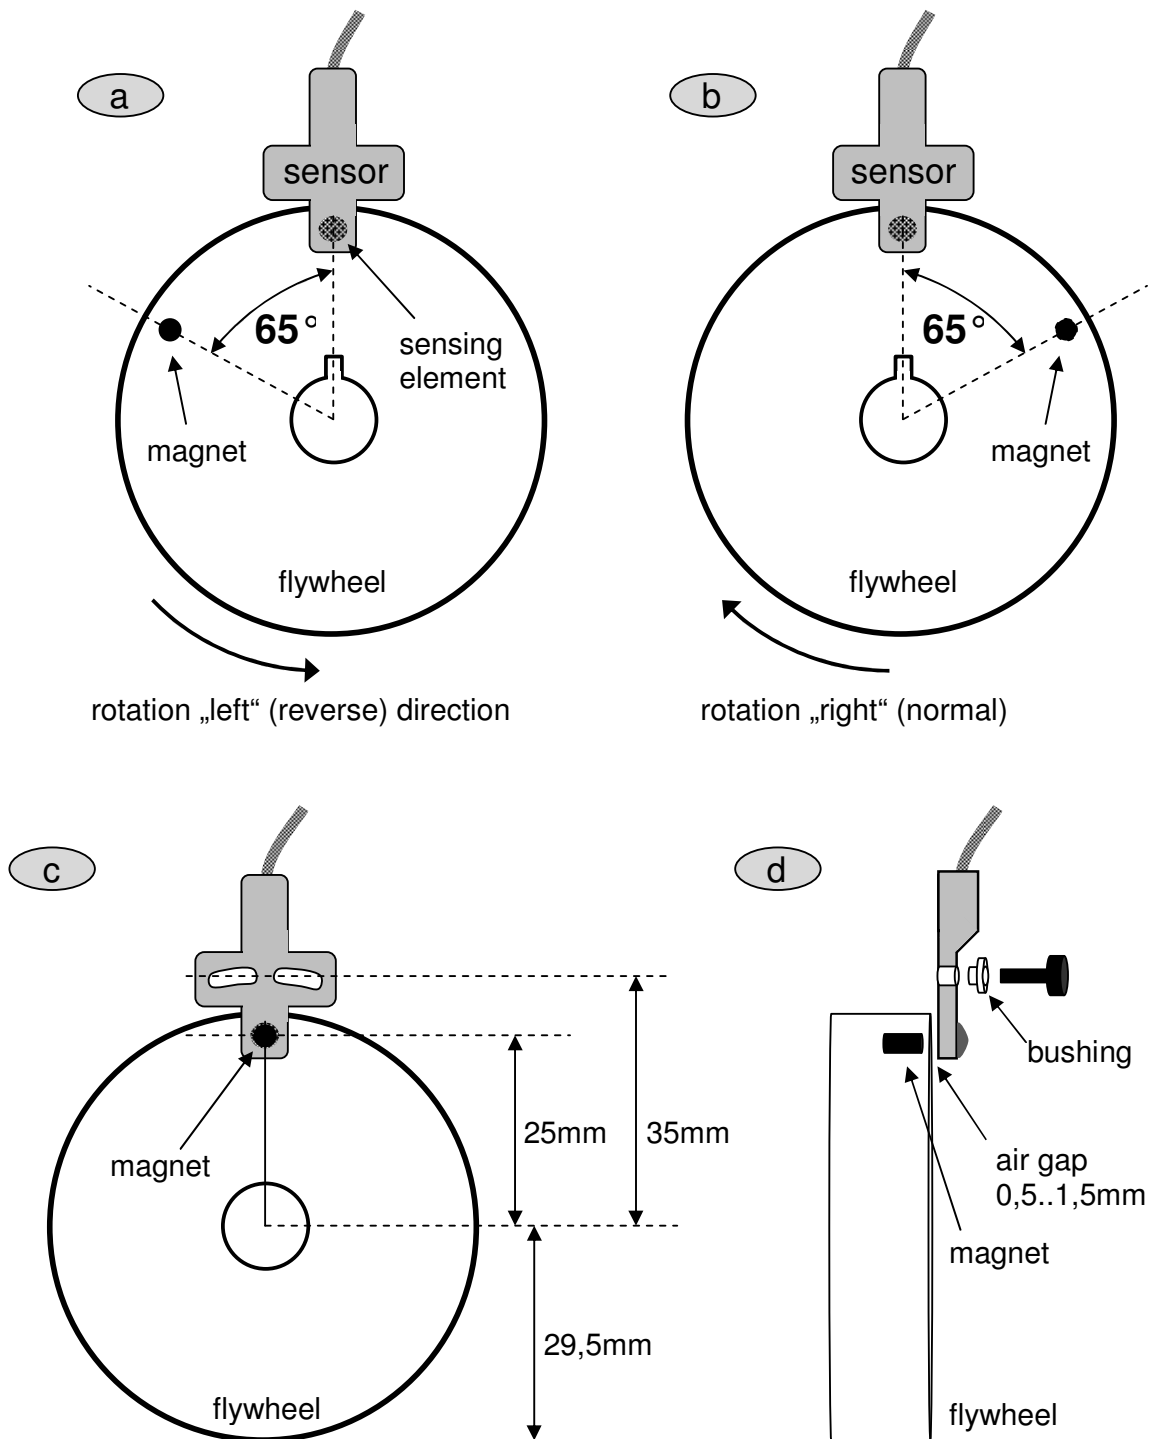


**➔ HINT:** For fine adjustment use menu „control sensor“ (p.30) in the configuration menu.

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Connections

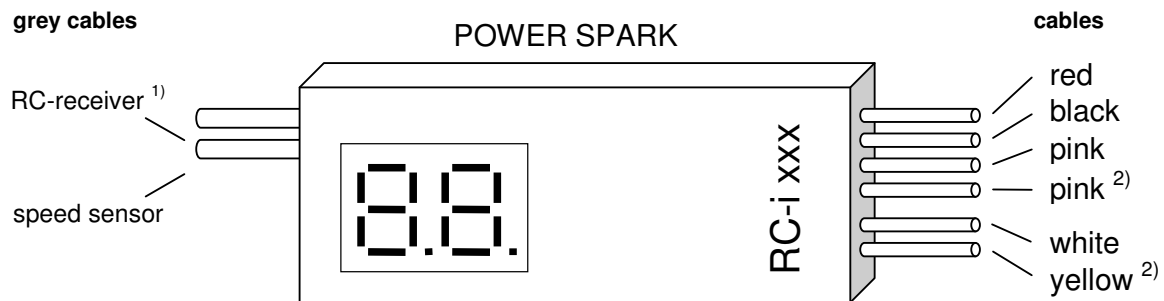

<sup>1)</sup> only RC-receiver control versions RC-i x2x


<sup>2)</sup> only multiple cylinders versions RC-i 2 xx

### Pin assignment of POWER SPARK

| color                | Function  | cross section     | length |
|----------------------|---|-------------------|--------|
| red                  | + supply (4..12V),<br><b>use fuse</b> (value see p. 43) | 1 mm <sup>2</sup> | 25 cm  |
| black                | - supply (earth)  | 1 mm <sup>2</sup> | 25 cm  |
| pink                 | + supply ignition coil 1                                | 1 mm <sup>2</sup> | 35 cm  |
| pink <sup>2)</sup>   | + supply ignition coil 2 <sup>2)</sup>                  | 1 mm <sup>2</sup> | 35 cm  |
| white                | - supply ignition coil 1                                | 1 mm <sup>2</sup> | 35 cm  |
| yellow <sup>2)</sup> | - supply ignition coil 2 <sup>2)</sup>                  | 1 mm <sup>2</sup> | 35 cm  |

### Pin assignment of RC-receiver-cable <sup>1)</sup>

| color | Function                      | cross section        | length |
|-------|-------------------------------|----------------------|--------|
| white | + voltage receiver (3..12V)   | 0,14 mm <sup>2</sup> | 21 cm  |
| green | receiver signal (servosignal) | 0,14 mm <sup>2</sup> | 21 cm  |
| brown | - voltage receiver (earth)    | 0,14 mm <sup>2</sup> | 21 cm  |

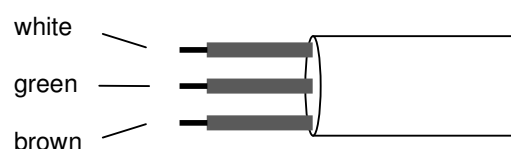


<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Connecting diagram 1

exemplary for POWER SPARK RC-i 220:

- shared battery pack (accu) for receiver and POWER SPARK

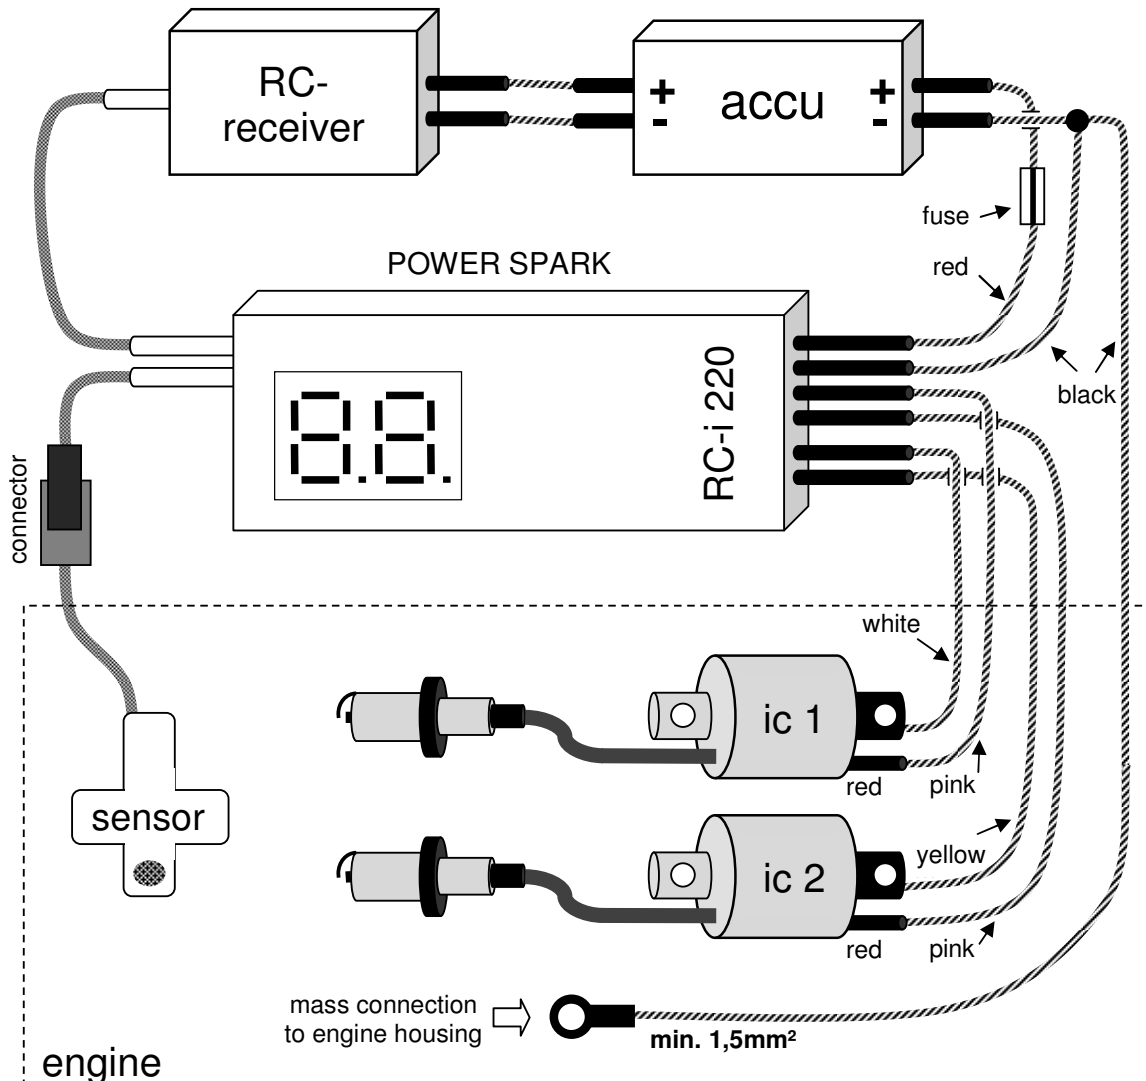

**important:** ➔ insulate non-used cables with insulating tape  
 ➔ elongate cables only with min 1,5mm<sup>2</sup> cables


<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Connecting diagram 2

exemplary for POWER SPARK RC-i 220:

- separate battery packs for receiver and POWER SPARK  
 ⇒ mass connection (m) established between batteries

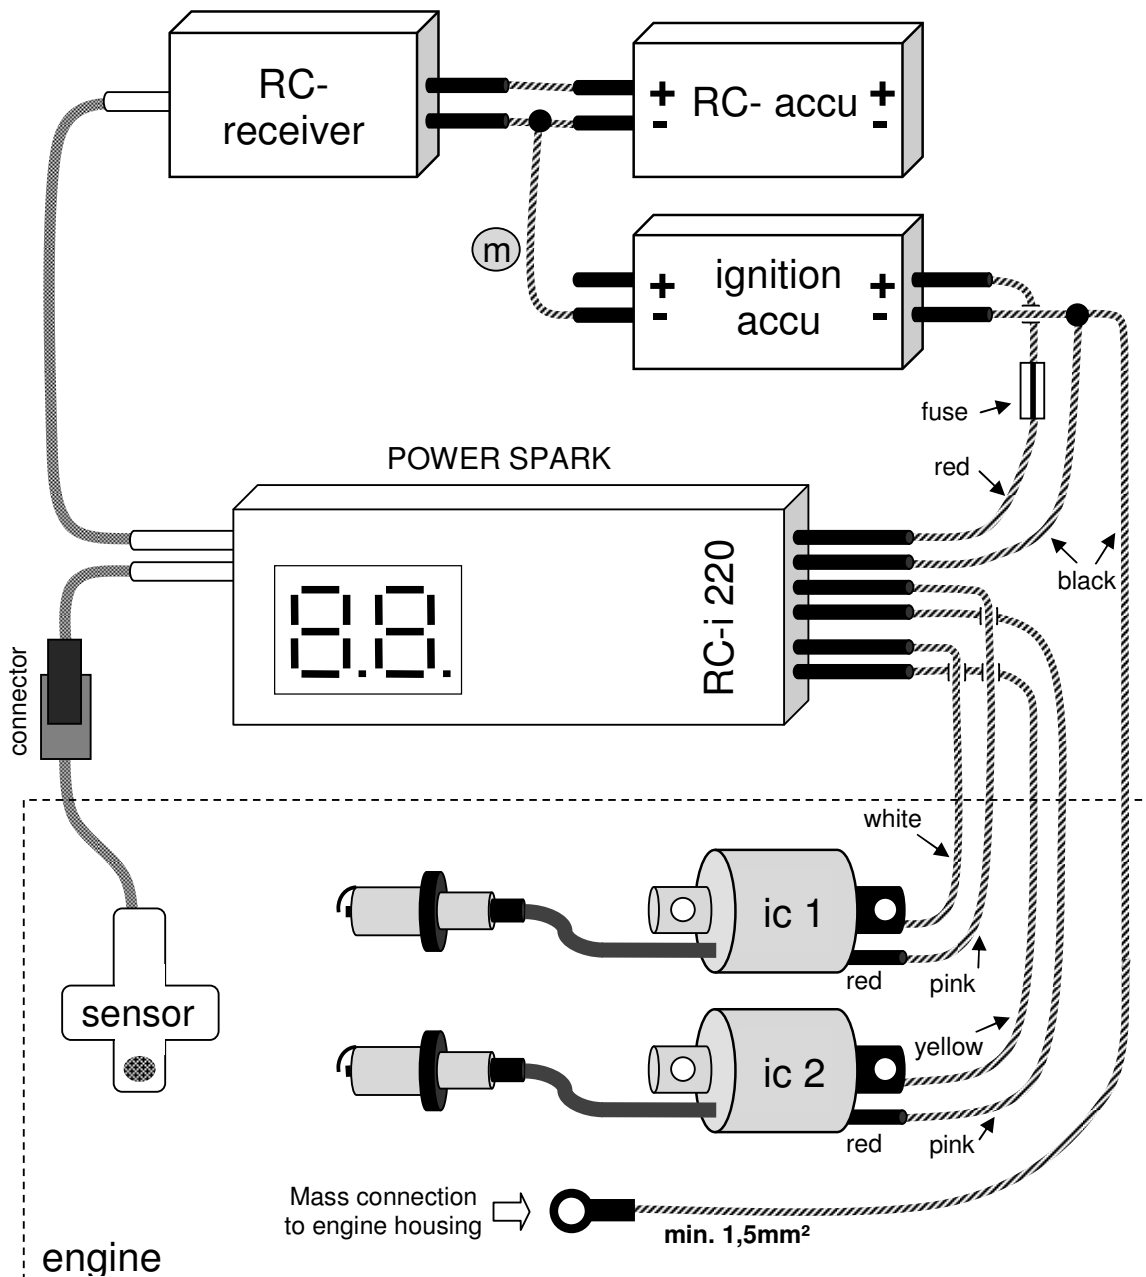


**important:** → insulate non-used cables with insulating tape  
 → elongate cables only with min 1,5mm<sup>2</sup> cables

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Connection of ignition coil

The POWER SPARK conducts the ignition pulse via the white or yellow cable to the ignition coil's ground connection. The ground connection of the ignition coil must not have an electric contact to the engine housing, contrary to the original application. Furthermore it has to be insulated to avoid accidental touching.

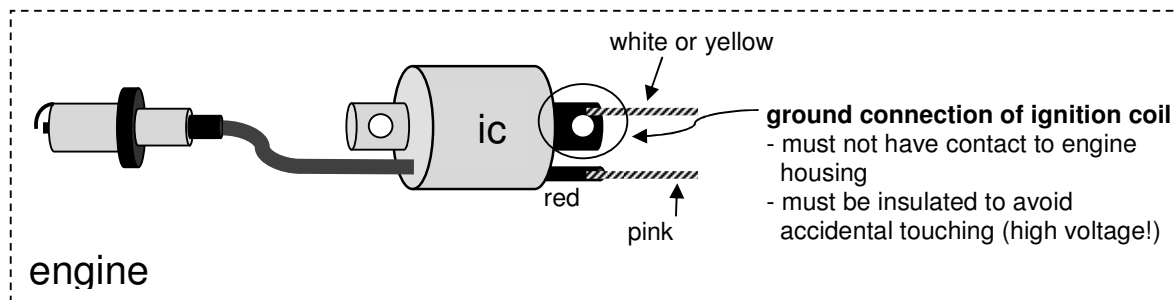

## Modification of ignition coil

(Proposal on application of an insulating bushing that is available as accessories, item-nr.: IB-1)

|   |  |
|---|--|
| original state<br>- ignition coil with electrically conductive metal bushing (1)                                    |  |
| ➤ drilled out bushing<br>- use drill with Ø 6,2mm   |  |
| ➤ (3) connection of white/ yellow cable with eye<br>(4) insulation bushing (access.)<br>(5) grommet<br>(6) screw M4 |  |
| ➤ (7) insulate the electrically conductive components, for example with silicone or adhesive tape                   |  |


<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

# Programming - essentials

## General

To make the programming as simple as possible, the POWER SPARK can be programmed with the provided programming magnet. In the left bottom corner there is a magnetic sensitive element that can be triggered by approaching the programming magnet.

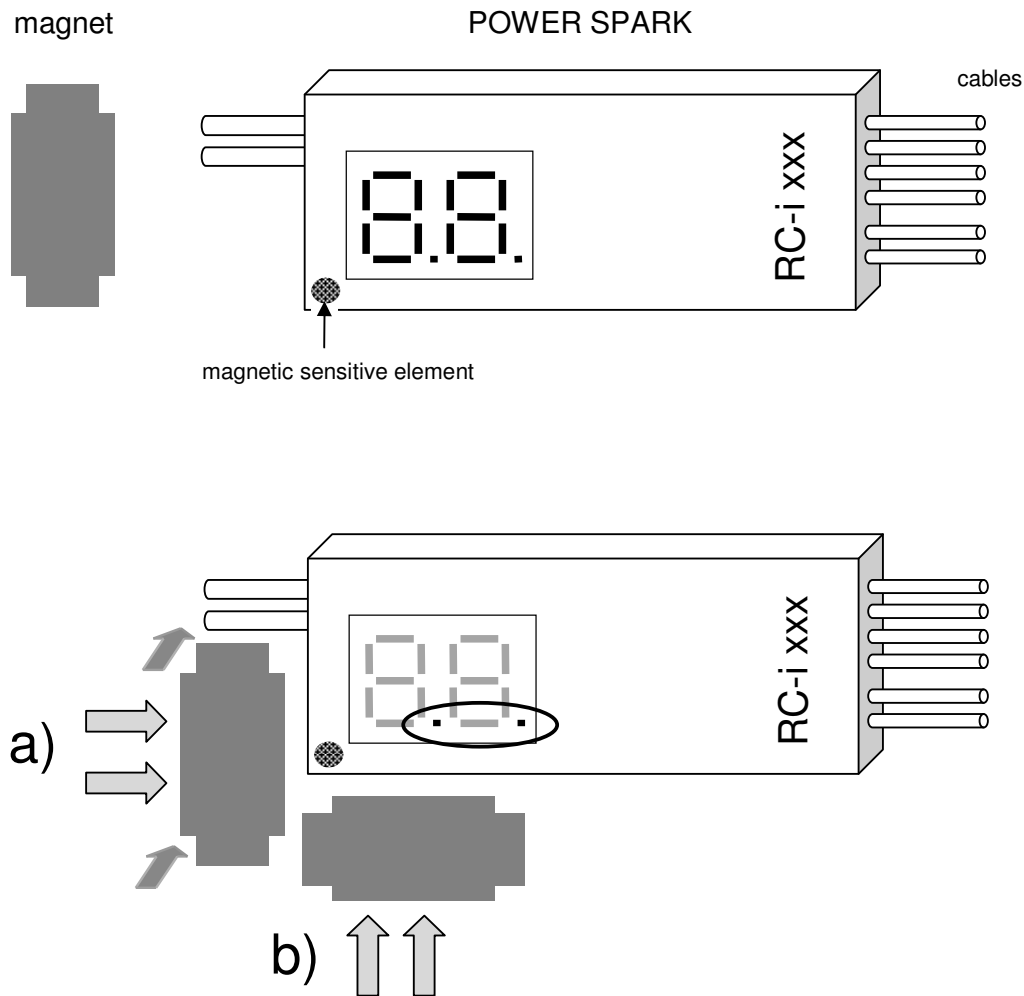

By approaching the programming magnet parallel to the **left side** of the POWER SPARK (sideways or from top, position a) ) in a distance of less than 10 mm the magnetic sensitive element is triggered. The POWER SPARK confirms the activation and shows „ . . “ additional to the active display.

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx


All trademarks are industrial property of the respective owners.

⇒ After that confirmation remove the magnet.


Alternatively the programming magnet can be approached along the bottom side (position b), see figure.

If there is few space the programming magnet can also be approached vertically to the magnetic sensitive element.


- c) Approach the magnet vertical from the left side to the bottom left corner.
- d) Alternatively approach the magnet vertical from the bottom to the bottom left corner of the POWER SPARK.

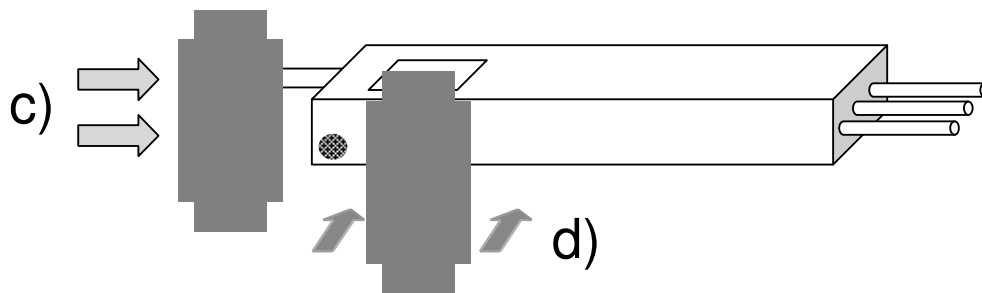


## Symbolic

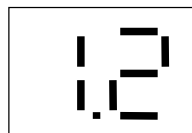

display: „1.2“  
=> no input expected

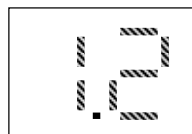


display: „1.2“, flashing  
=> user input expected

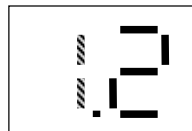

display: „1.2“  
„1“ flashing, „2“ not flashing  
=> user input expected



display: „≡“  
modified values are stored

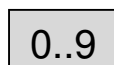

acceptable range of values (0 to 9)



action of operator required

---

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Menu structure

The operation of the POWER SPARK results by selection of the desired set or displayed parameters by approaching and removing the programming magnet.

The parameters are arranged in three main menu groups

- configuration menu „Co“
  - engine adjustments, that are changed rarely
- status menu „llll“
  - displays actual values
- diagnostics menu „dd“
  - modifying of diagnostic parameters

A parameter can be modified by the following procedure

- select the according main menu
  - the adjustable menu items flash one after another for 3sec
- confirm the desired menu item by approaching and removing the programming magnet
  - (for confirmation the display shows „. . “ additionally)
- display shows the actual value of the parameter
- selection of values by the user
  - adjustable values flash one after another for 3sec
- confirm the desired menu item by approaching and removing the programming magnet (possibly several times)
- display shows the new modified values
- POWER SPARK returns to the normal operation mode (display of engine speed)

## Annotations

- the configuration menu can only be activated when the POWER SPARK is turned on
- the status- and diagnostic menus can be called only when the engine is not running
- the POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby) if no confirmation happens during the changing displays of the individual menu items
- if no confirmation (with the programming magnet) happens during the change of any value, the prior values will be retained

---

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx








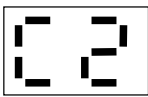
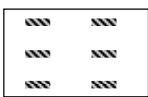
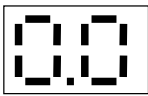
All trademarks are industrial property of the respective owners.



**Example:**

The preset ignition map „2“ shall be selected:


- the ignition map can be adjusted in the menu item „ignition map menu“ contained in „configuration menu“
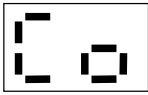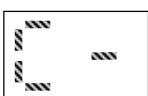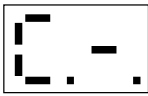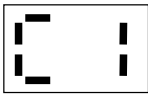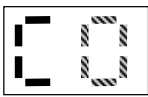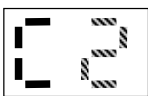
| nr. | action   | display   |
|-----|--|---|
| 1-4 | ➤ select configuration menu, see page 19   |    |
| 5   | selectable menu items flash one after the other (see configuration menu)<br>➤ wait until „C-“ flashes  |    |
| 6   | ➤ actuate magnetic element<br>(by approaching the programming magnet to the housing near the magnet sensitive element, remove after display shows “. .”) |    |
| 7   | display shows current ignition map<br>(here ignition map „1“)  |  |
| 8   | adjustable values flash one after another for 3sec   |  |
| 9   | ➤ wait until „2“ flashes   |  |
| 10  | ➤ actuate magnetic element<br>(by approaching the programming magnet to the housing near the magnet sensitive element, remove after display shows “. .”) |  |
| 11  | display shows the new selected ignition map<br>(ignition map „2“)  |  |
| 12  | display indicates that new values are stored   |  |
| 13  | POWER SPARK returns to the normal operation mode<br>(display of engine speed and ignition standby)   |  |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.


## Overview configuration menu

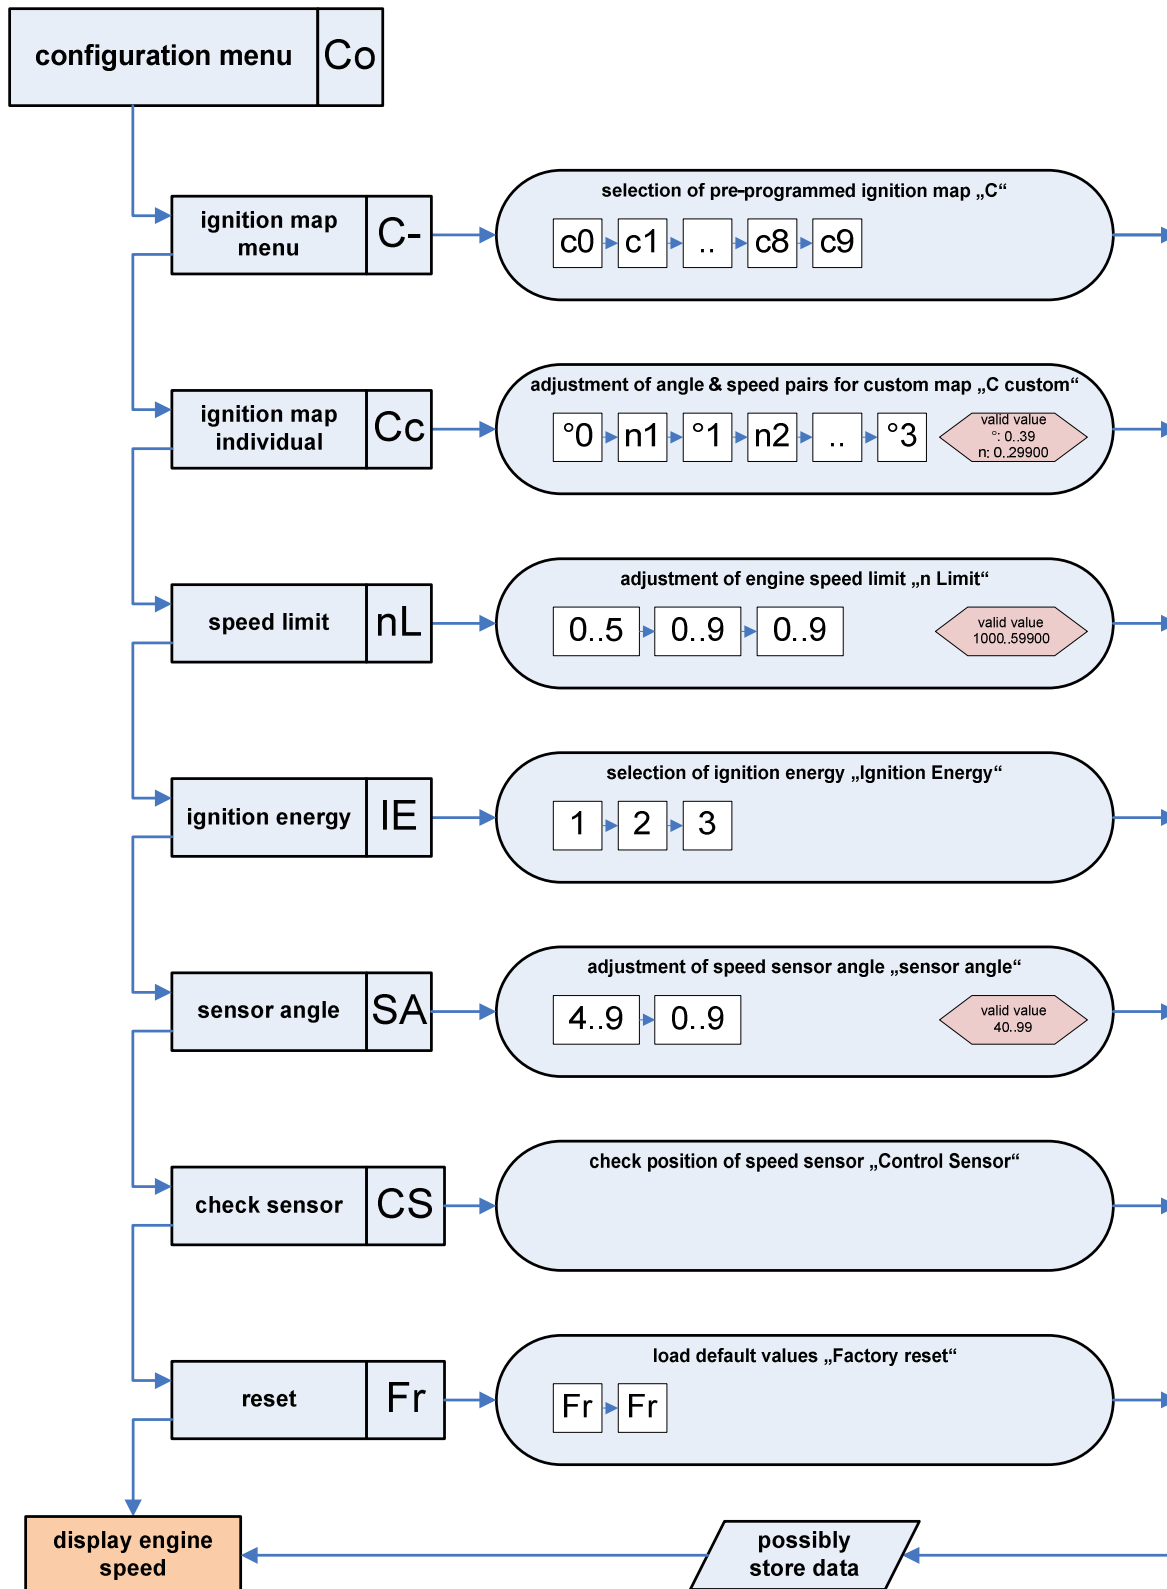

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.


## Overview status- and diagnostics menu

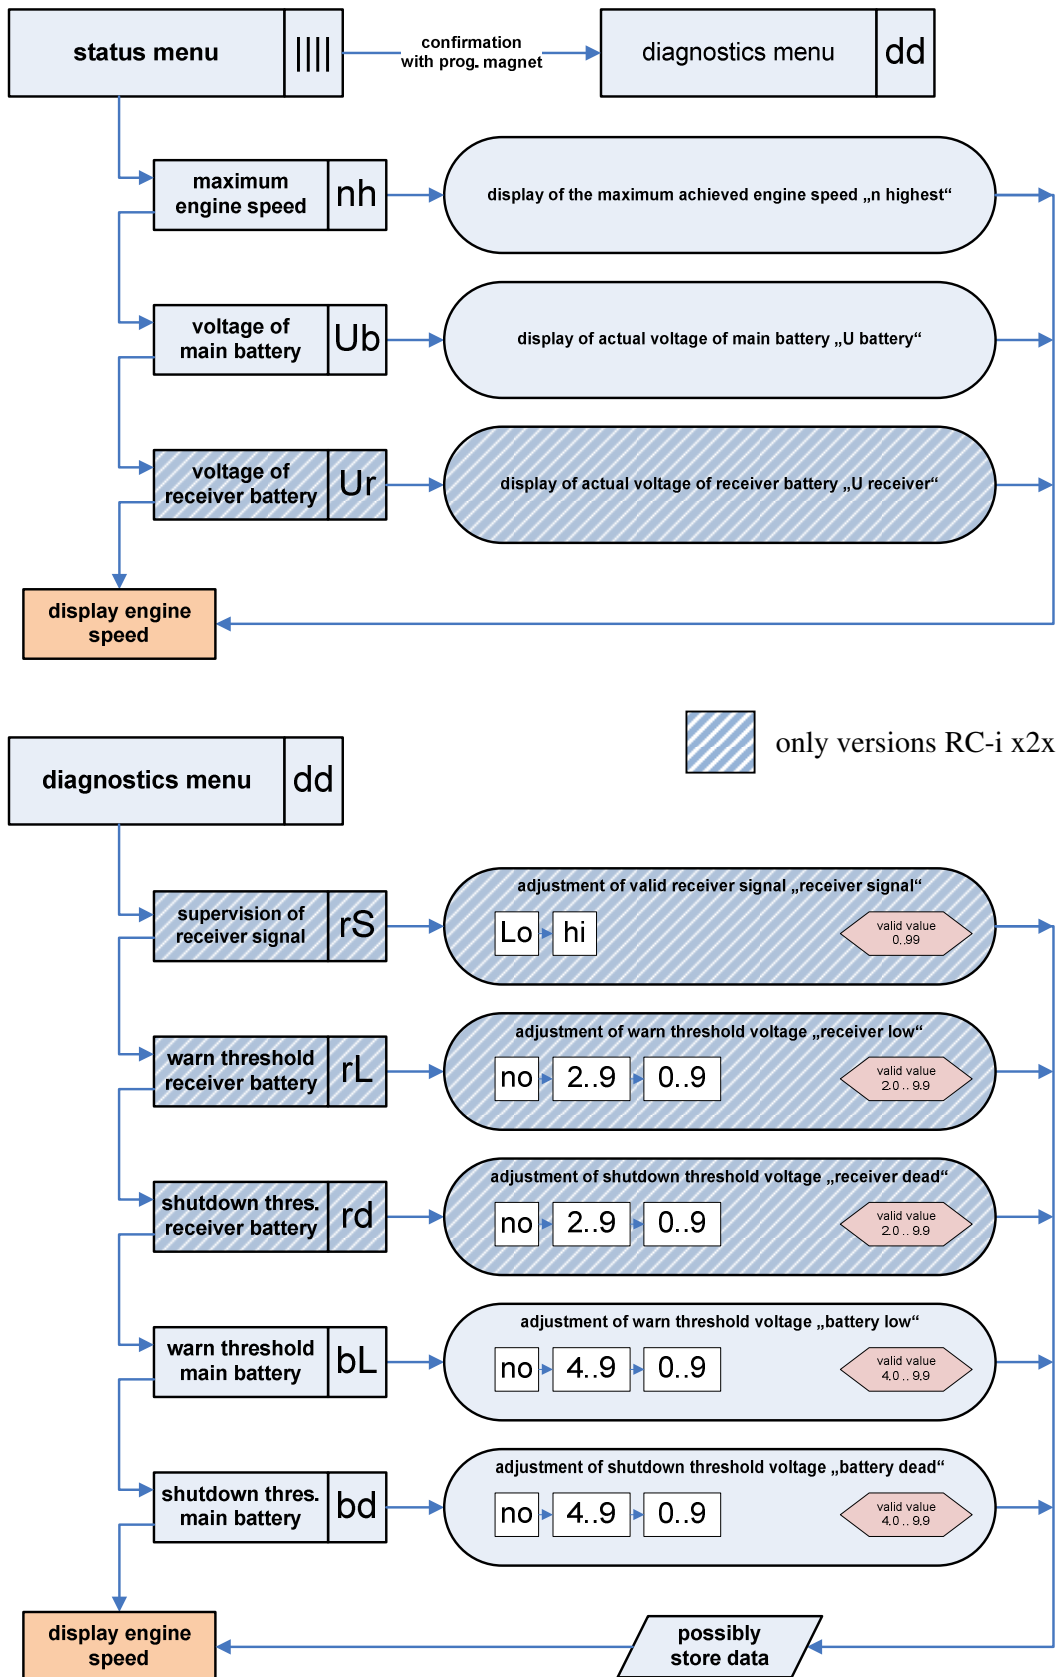

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

# Programming



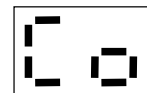

## CONFIGURATION MENU



The configuration menu includes the following menu items

- a) ignition map menu**  
selection of one of nine pre-programmed ignition maps
- b) ignition map individual**  
configuration of one custom ignition map
- c) speed limit**  
adjustment of engine speed limit (engine sputters)
- d) ignition energy**  
selection of ignition energy
- e) sensor angle**  
compensation of mechanical displacement of speed sensor
- f) check sensor**  
check mechanical position of speed sensor
- g) factory reset**  
reset POWER SPARK to default settings

The configuration menu contains engine parameters, which shouldn't be manipulated thoughtless. To avoid an unintended changing the configuration menu can be called only in the following way:


| nr. | action   | display   |
|-----|--|---|
| 1   | ➤ interrupt voltage supply of POWER SPARK                                      |  |
| 2   | ➤ approach programming magnet to the housing near the magnet sensitive element |  |
| 3   | ➤ turn on voltage supply   |  |
| 4   | ➤ remove programming magnet  |  |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.


**a) ignition map menu**

selection of one of nine pre-programmed ignition maps  
(factory setting: map <1>)

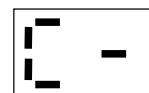

To enable a quick initial operation of the engine the POWER SPARK contains nine pre-programmed ignition maps. They serve as basic adjustment and starting point for a further optimization. For a specific adjustment to the engine you can use an individual created map.

The individual ignition map can be activated by choosing map „0“ in the ignition map menu. The adjustment of the individual ignition map is described in the next section.

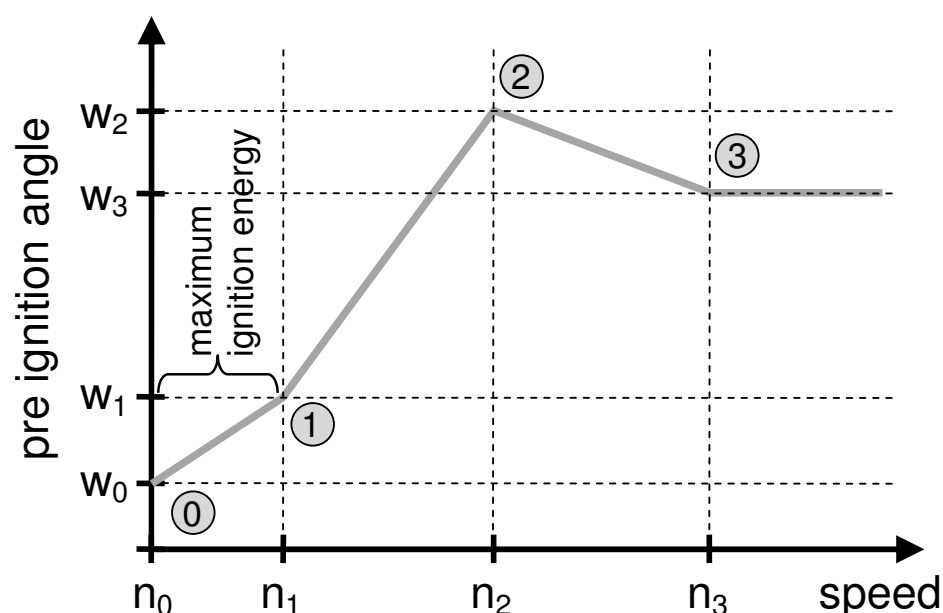

| map             | ①              |                | ②              |                | ③              |                | ④              |                |                |
|-----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|
|                 | n <sub>0</sub> | w <sub>0</sub> | n <sub>1</sub> | w <sub>1</sub> | n <sub>2</sub> | w <sub>2</sub> | n <sub>3</sub> | w <sub>3</sub> |                |
| 0               | see            |                | individual     |                | map            |                |                |                |                |
| 1 <sup>1)</sup> | 0              | 25             | 3000           | 25             | 6000           | 30             | 22000          | 25             | similar Zenoah |
| 2               | 0              | 25             | 3000           | 20             | 6000           | 25             | 22000          | 20             |                |
| 3               | 0              | 25             | 3000           | 20             | 6000           | 25             | 22000          | 25             |                |
| 4               | 0              | 25             | 3000           | 20             | 6000           | 25             | 22000          | 30             |                |
| 5               | 0              | 25             | 3000           | 20             | 6000           | 25             | 22000          | 35             |                |
| 6               | 0              | 30             | 3000           | 20             | 6000           | 30             | 22000          | 25             |                |
| 7               | 0              | 30             | 3000           | 20             | 6000           | 30             | 22000          | 30             |                |
| 8               | 0              | 30             | 3000           | 20             | 6000           | 30             | 22000          | 35             |                |
| 9               | 0              | 30             | 3000           | 20             | 6000           | 30             | 22000          | 39             |                |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Selection of a pre-programmed ignition map

example: ignition map „4“ shall be selected

| nr. | action  | display |
|-----|---|---------|
| 1-4 | ➤ select configuration menu   |         |
| 5   | ➤ wait until „C-“ flashes   |         |
| 6   | ➤ actuate magnetic element  |         |
| 7   | display shows the current ignition map (for example map „1“)                                    |         |
| 8   | adjustable values flash one after another for 3sec (0-9)  |         |
| 9   | ➤ wait until the desired map flashes (for example map „4“)                                      |         |
| 10  | ➤ actuate magnetic element  |         |
| 11  | display shows the new selected map (map „4“)  |         |
| 12  | display indicates that new values are stored  |         |
| 13  | POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby) |         |

### Please note:

! The pre-programmed maps represent only a starting point or are derived from customer's experiences. Each engine has to be adjusted specifically depending of use. We apologize for any inconvenience, that we cannot be responsible for consequential damages by installing the pre-programmed ignition maps. !

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## b) ignition map individual


configuration of one custom ignition map



An individual created ignition map can be programmed with four pre-ignition angle and speed pairs. **The value of the speed  $n_0$  cannot be modified; it is set constantly to 0rpm**

The creation of an individual map should result on experience with a pre-programmed map. Wrong adjustments can have negative effects on engine smoothness, responding behavior or also on mechanical components.

**We are not responsible for consequential damages as a result of improper engine adjustments.**

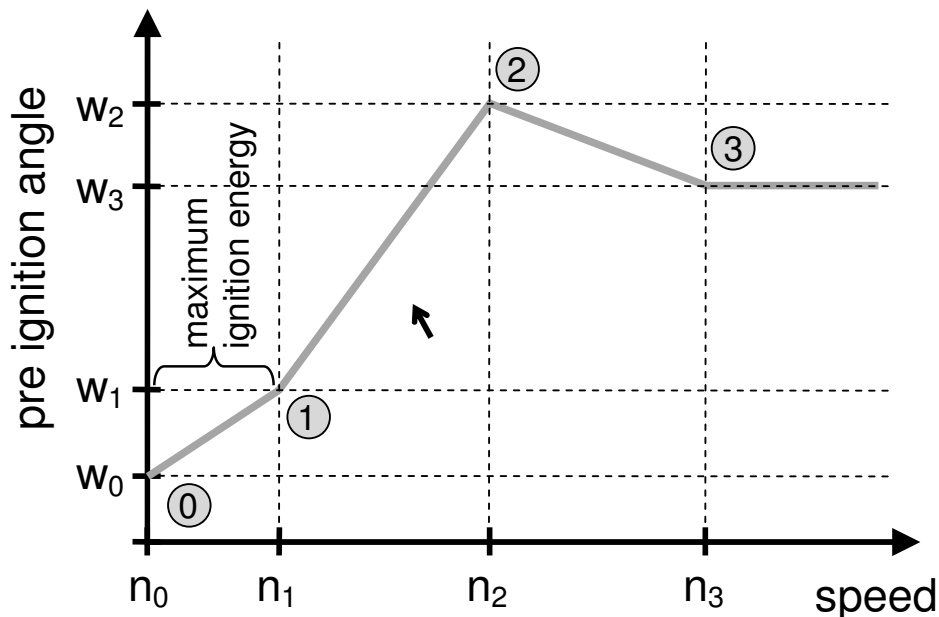

The speed values  $n_x$  can be adjusted in 100rpm- steps, the pre ignition angles in  $1^\circ$ -steps.

restrictions:

- $n_3 > n_2 > n_1 > n_0$
- $n_3, n_2, n_1 < 30000$
- $w_3, w_2, w_1, w_0 < 39^\circ$

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Adjustment of the custom ignition map

The adjustment of the custom ignition map is basically more complex than other menu adjustments. Before starting, please collect experience with the operation concept in other menu adjustments. Change primarily only few parameters and check the adjusted values, possibly note the values down.






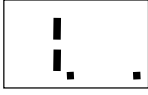

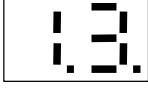
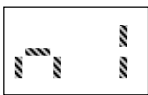



In the following example the current ignition angle and speed pairs shall be unchanged, only angle  $w_0$  shall be changed to  $13^\circ$  and speed  $n_2$  to 21500 rpm.

| nr. | action   | display |
|-----|--|---------|
| 1-4 | ➤ select configuration menu  |         |
| 5   | ➤ wait until „Cc“ flashes  |         |
| 6   | ➤ actuate magnetic element   |         |
| 7   | display shows the current speed values „n“ and the current angle values „°“ one after another<br>$n_0 \rightarrow w_0 \rightarrow n_1 \rightarrow w_1 \rightarrow n_2 \rightarrow w_2 \rightarrow n_3 \rightarrow w_3$                           |         |
| 7a  | The POWER SPARK has a two digit LED display. This is why the display of speed values occurs by sequentially displaying the figures. The display shows the speed figures one after another (here for example „ $n_2$ “=12500rpm).<br>display:<br> |         |
| 7b  | display of pre-ignition angle:<br>(here for example „ $w_2$ “=15°)<br>   |         |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.



|     |   |   |
|-----|---|---|
| TIP | For a faster adjustment of the parameters the display of the values can be interrupted:<br>➤ wait, until any angle will be displayed<br>(for example „w <sub>0</sub> “)<br>➤ actuate magnetic element |    |
| 8   | display shows „i i“, an information, that the proper programming can start and inputs from the user are expected  |    |
| 9   | adjustable parameters flash one after another for 3sec:<br>$w_0 \rightarrow n_1 \rightarrow w_1 \rightarrow n_2 \rightarrow w_2 \rightarrow n_3 \rightarrow w_3$                                      |    |
| 10  | ➤ actuate magnetic element to select the parameter for modifying. Example:<br>the angle „w <sub>0</sub> “ is selected for modifying   |    |
| 11  | adjustable values of the tens flash one after another for 3 sec (0-3)   |    |
| 12  | ➤ wait until the desired figure flashes<br>(for example „1“)<br>➤ actuate magnetic element  |   |
| 13  | adjustable values of the unit position flash one after another for 3 sec (0-9)  |  |
| 14  | ➤ wait until the desired figure flashes<br>(for example „3“)<br>➤ actuate magnetic element  |  |
| 15  | the remaining adjustable parameters flash one after another for 3 sec:<br>$n_1 \rightarrow w_1 \rightarrow n_2 \rightarrow w_2 \rightarrow n_3 \rightarrow w_3$                                       |  |
| 16  | ➤ actuate magnetic element to select the parameter for modifying. Example:<br>the speed „n <sub>2</sub> “ is selected for modifying   |  |
| 17  | adjustable values of the ten thousands flash one after another for 3sec (0-2)   |  |
| 18  | ➤ wait until the desired figure flashes<br>(for example „2“)<br>➤ actuate magnetic element  |  |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

|     |   |  |
|-----|---|--|
| 19  | adjustable values of the thousands flash one after another for 3sec (0-9)   |  |
| 20  | ➤ wait until the desired figure flashes<br>(for example „1“)<br>➤ actuate magnetic element  |  |
| 21  | adjustable values of the hundreds flash one after another for 3sec (0-9)  |  |
| 22  | ➤ wait until the desired figure flashes<br>(for example „5“)<br>➤ actuate magnetic element  |  |
| 23  | the remaining adjustable parameters flash one after another for 3sec:<br>$w_2 \rightarrow n_3 \rightarrow w_3$  |  |
| 24  | ➤ wait until $w_3$ had flashed  |  |
| 25a | The error message „EE“ will be shown if wrong values are entered. The values before modification are retained.  |  |
| 25b | display shows the new (or retained) speed values „n“ and angle values „°“ one after another<br>$n_0 \rightarrow w_0 \rightarrow n_1 \rightarrow w_1 \rightarrow n_2 \rightarrow w_2 \rightarrow n_3 \rightarrow w_3$<br>(also described in (7)) |  |
| 26  | If all values are entered correctly and the described requirements are fulfilled, the values will be stored. Display indicates that the new values are stored.  |  |
| 27  | POWER SPARK returns to the normal operation mode<br>(display of engine speed and ignition standby)  |  |

### Please note:

After changing a parameter of the individual ignition map the individual map must be activated again.


- Therefore, select the ignition map menu „C-“ and adjust individual map „C0“. (see page 20)

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

**c) Speed limit**

adjustment of engine speed limit (engine splutters)  
(factory setting:  $n_L = <59900 \text{rpm}>$ )

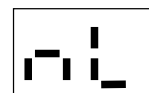


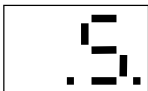
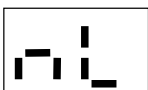

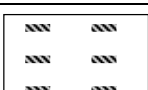

The engine can be protected against too high speeds with adjusting a speed limit. If the engine speed exceeds the adjusted speed limit for at least 0,4sec the ignition will be interrupted, the engine splutters. The speed limit can be adjusted exactly to 100rpm. If this safety function is not needed a speed limit value higher than the maximum engine speed should be programmed.

For example: speed limit of „21500 rpm“ shall be adjusted

| nr. | action  | display |
|-----|---|---------|
| 1-4 | ➤ select configuration menu   |         |
| 5   | ➤ wait until „nL“ flashes   |         |
| 6   | ➤ actuate magnetic element  |         |
| 7   | display shows the current speed limit by displaying the figures of the speed one after another.<br>display scheme see section b) point 7a)<br>(for example 2→0→0→0→0) |         |
| 8   | display shows „i“, an information, that the proper programming can start and inputs from the user are expected  |         |
| 9   | adjustable values of the ten thousands flash one after another for 3 sec (0-5)  |         |
| 10  | ➤ wait until the desired figure flashes<br>(for example „2“)<br>➤ actuate magnetic element  |         |
| 11  | adjustable values of the thousands flash one after another for 3sec (0-9)   |         |
| 12  | ➤ wait until the desired figure flashes<br>(for example „1“)<br>➤ actuate magnetic element  |         |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.


|    |   |   |
|----|---|---|
| 13 | adjustable values of the hundreds flash one after another for 3sec (0-9)  |  |
| 14 | ➤ wait until the desired figure flashes<br>(for example „5“)<br>➤ actuate magnetic element                            |  |
| 15 | for confirmation the adjusted speed is shown  |  |
| 16 | display shows the new speed limit by displaying the figures of the speed one after another<br>(for example 2→1→5→0→0) |  |
| 17 | Display indicates that the new values are stored  |  |
| 18 | POWER SPARK returns to the normal operation mode.<br>(display of engine speed and ignition standby)                   |  |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

**d) Ignition energy**

selection of ignition energy (&lt;2&gt;)

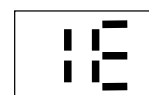

The ignition energy of the POWER SPARK can be adapted to the engine. The stronger the spark is the safer is the ignition of the air fuel mixture; however the POWER SPARK consumes more electric power. To extend the operating time of the battery the ignition energy should be chosen not higher than needed for a smooth engine running. To improve the startup behavior the highest ignition energy is used between speed  $n_0$  and  $n_1$ .

Adjustment possibilities:

- setting „1“      low ignition energy
- setting „2“      medium ignition energy (factory setting)
- setting „3“      high ignition energy


| nr. | action  | display |
|-----|---|---------|
| 1-4 | ➤ select configuration menu   |         |
| 5   | ➤ wait until „IE“ flashes   |         |
| 6   | ➤ actuate magnetic element  |         |
| 7   | display shows the current ignition energy (for example „2“)                                     |         |
| 8   | adjustable values flash one after another for 3 sec (1-3)                                       |         |
| 9   | ➤ wait until the desired value flashes, (for example „3“)<br>➤ actuate magnetic element         |         |
| 10  | display shows the new selected ignition energy (here „3“)                                       |         |
| 11  | display indicates that the new value is stored  |         |
| 12  | POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby) |         |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

**e) Sensor angle**

compensation of mechanical displacement of speed sensor (&lt;75&gt;)

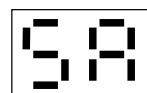

A small angular offset between the ideal trigger of the speed sensor (75° before top dead center) and the current value can be adjusted by setting the actual angle value between the speed sensor and the sensor magnet.

- Mark the angle between the trigger point of the speed sensor and the top dead center using menu „CS“ (see next page).

If you adjust angle values less than the nominal 75° the available computing time of the microcontroller will be shorter. For example, an adjustment of the sensor angle to 70° limits the use of high pre-ignition angles (≈35°) to engine speeds (<26500rpm).




| nr. | action  | display   |
|-----|---|---|
| 1-4 | ➤ select configuration menu   | A digital display showing 'Co' in a 7-segment font.   |
| 5   | ➤ wait until „SA“ flashes   | A digital display showing 'SA' in a 7-segment font, with the digits having a dashed outline.                                      |
| 6   | ➤ actuate magnetic element  | A digital display showing 'SA' in a 7-segment font, with the digits having a dashed outline.                                      |
| 7   | display shows the current sensor angle value (for example „75“)   | A digital display showing '75' in a 7-segment font.   |
| 8   | adjustable values of the tens flash one after another for 3 sec (4-7)<br>➤ wait until the desired figure flashes (for example „6“)<br>➤ actuate magnetic element          | A digital display showing '6' in a 7-segment font, with the digit having a dashed outline.  |
| 9   | adjustable values of the unit position flash one after another for 3 sec (4-7)<br>➤ wait until the desired figure flashes (for example „6“)<br>➤ actuate magnetic element | A digital display showing '69' in a 7-segment font, with the digits having a dashed outline.                                      |
| 10  | display shows the new selected angle value (here: 69)   | A digital display showing '69' in a 7-segment font.   |
| 11  | display indicates that the new value is stored  | A digital display showing two vertical bars, each composed of three horizontal segments, representing a memory or storage symbol. |
| 12  | POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby)   | A digital display showing '00' in a 7-segment font.   |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

**f) Check sensor**

 check mechanical position of speed sensor



The speed sensor has to be positioned in a way that it is triggered by the sensor magnet **75° before reaching** the top dead center. With the help of this menu the adjustment can be done easily.  
=> see also page 7 and page 29

If there is no further mechanical correction possible:

- measure the actual triggering angle (for example mark flywheel at the triggering point and at the top dead center with a pen and measure this angle).
- adjust the angle value in menu point „SA“ (page 29)

**Important:** Please note the constraints when adjusting the value of the sensor angle!

| nr. | action  | display |
|-----|---|---------|
| 1-4 | ➤ select configuration menu   |         |
| 5   | ➤ wait until „CS“ flashes<br>➤ actuate magnetic element   |         |
| 6   | display shows permanently the first decimal point   |         |
| 7   | ➤ turn flywheel in direction of rotation until the display shows „ii“<br>The sensor magnet of the flywheel is detected by speed sensor. |         |
| 8   | ➤ turn back flywheel until only the first decimal point is shown  |         |
| 9   | ➤ repeat step 7 to proceed in this way; adjust an angle of 75 ° between top dead center and trigger point.                              |         |
| 10  | after making the adjustment:<br>➤ actuate magnetic element  |         |
| 11  | POWER SPARK returns to normal operation mode (display of engine speed and ignition standby)   |         |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

**g) Factory reset**

reset POWER SPARK to default settings



The POWER SPARK can be reset in the initial state with default values at any time.

**WARNING:** all stored settings get lost.

| nr. | action  | display |
|-----|---|---------|
| 1-4 | ➤ select configuration menu   |         |
| 5   | ➤ wait until „Fr“ flashes   |         |
| 6   | ➤ actuate magnetic element  |         |
| 7   | „Fr“ flashes again for 3sec   |         |
| 8   | ➤ within this time actuate magnetic element   |         |
| 9   | „Fr“ flashes again for 3sec   |         |
| 10  | ➤ within this time actuate magnetic element   |         |
| 11  | display confirms the initialization with the factory settings                                   |         |
| 12  | display indicates that the values are stored  |         |
| 13  | POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby) |         |
| 14  | ➤ reset POWER SPARK, therefore disconnect and reconnect power supply                            |         |


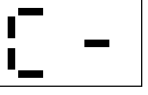
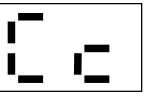
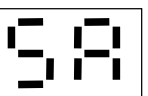



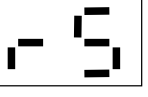




⇒ The next page shows the values of the default setting.

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.




## default setting
 
| main menu   | menu  | parameter   | value                     |
|---|---|---|---------------------------|
| <br>configuration menu |                  | ignition map  | <b>1</b><br>(0-9)         |
|   |                  | individual ignition map   | values of<br>map 1        |
|   |                  | sensor angle  | <b>75</b><br>(40..99)     |
|   |                  | engine speed limit  | <b>59900</b><br>(0-59900) |
|   |                 | ignition energy   | <b>2</b><br>(1-3)         |
| <br>diagnostic menu  |  <sup>1)</sup> | receiver signal<br>supervision <sup>1)</sup>                        | <b>no</b><br>(no, 0..99)  |
|   |  <sup>1)</sup> | warn threshold<br>low voltage<br>receiver battery <sup>1)</sup>     | <b>no</b><br>(no, 2..9,9) |
|   |  <sup>1)</sup> | shutdown threshold<br>low voltage<br>receiver battery <sup>1)</sup> | <b>no</b><br>(no, 2..9,9) |
|   |                | warn threshold<br>low voltage<br>main battery                       | <b>no</b><br>(no, 4..9,9) |
|   |                | shutdown threshold<br>low voltage<br>main battery                   | <b>no</b><br>(no, 4..9,9) |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

**STATUS MENU**

The status menu can only be selected when the engine halts.  
It includes the menu items:

- a) **maximum engine speed „nh“**  
display of maximum achieved engine speed
- b) **voltage of main battery „Ub“**  
display of actual main battery voltage
- c) **voltage of receiver battery<sup>1)</sup> „Ur“**  
display of actual receiver battery voltage

**selection of status menu**



| nr. | action   | display |
|-----|--|---------|
| 1   | POWER SPARK in normal operation mode   |         |
| 2   | ➤ actuate magnetic element<br>(by approaching the programming magnet to the housing near the magnet sensitive element) |         |
| 3   | after 3sec the right figure „d“ flashes<br>➤ wait 3 sec to get to the status menu                                      |         |
| 4   | the selectable menu items flash one after the other for 3sec in the order:<br>„nh“ → „Ub“ → „Ur“ <sup>(1)</sup>        |         |

**a) Display of maximum achieved engine speed „nh“ (n highest)**





- => value will be erased when removing the power supply
- => value is averaged over a period of 0.8sec

| nr. | action  | display |
|-----|---|---------|
| 1-4 | ➤ select status menu                                    |         |
| 5   | ➤ wait until „nh“ flashes<br>➤ actuate magnetic element |         |

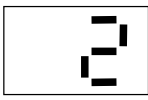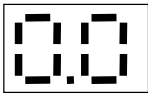



<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx
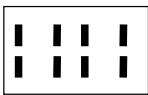
|   |   |   |
|---|---|---|
| 6 | display shows the figures of speed one after another (for example 2→5→6→5→4)                    |  |
| 7 | POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby) |  |
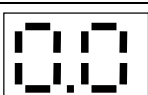
### b) Display of actual main battery voltage „Ub“ (U battery)

| nr. | action  | display  |
|-----|---|--|
| 1-4 | ➤ select status menu  |   |
| 5   | ➤ wait until „Ub“ flashes<br>➤ actuate magnetic element   |   |
| 6   | display shows the actual battery voltage (for example 5,6 vVolt)                                |   |
| 7   | POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby) |  |


### c) Display of actual receiver battery voltage<sup>1)</sup> „Ur“ (U receiver)
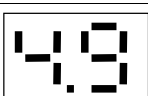
| nr. | action  | display   |
|-----|---|---|
| 1-4 | ➤ select status menu  |  |
| 5   | ➤ wait until „Ur“ flashes<br>➤ actuate magnetic element   |  |
| 6   | display shows the actual receiver battery voltage (for example 4,9 volt)                        |  |
| 7   | POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby) |  |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## DIAGNOSTICS MENU

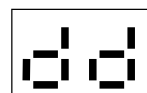

### General

The POWER SPARK provides several diagnostic functions to increase the reliability of the system.

- If the monitored voltage falls below the adjusted warning threshold ignition failures will be systematically generated **starting from the half maximum allowed engine speed.**  
(=> engine splutters) to inform the user of a weak battery.  
(adjustment of speed in menu item „n1“, p.26)
- If the monitored voltage falls below the switch-off threshold the engine will be shut down for safety.  
(for example cable break of power supply on the RC-receiver)
- When receiving an illegal signal from the RC-receiver the engine will be shut down <sup>1)</sup>. (f.e. in case of failure of radio transmission)

A warning or shutdown is only triggered after a defined time (see table on page 37) when the monitored parameters have exceeded or under-run the permissible range of values. The warning or shutdown criteria are explained in the respective menus descriptions.

The diagnostic menu can only be selected when the engine halts.






It includes the menu items:

- a) **Supervision of receiver signal<sup>1)</sup>** → engine shutdown  
activation and adjustment of the valid receiver signal range
- b) **Warning threshold receiver battery<sup>1)</sup>** → engine splutters at nL/2  
activation and adjustment of warning threshold  
for supervision of receiver battery voltage
- c) **Shutdown threshold receiver battery<sup>1)</sup>** → engine shutdown  
activation and adjustment of shutdown threshold  
for supervision of receiver battery voltage
- d) **Warning threshold main battery** → engine splutters at nL/2  
activation and adjustment of warning threshold  
for supervision of main battery voltage
- e) **Shutdown threshold main battery** → engine shutdown  
activation and adjustment of shutdown threshold  
for supervision of main battery voltage

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.






## selection of diagnostic menu

| nr. | action  | display  |
|-----|---|--|
| 1   | POWER SPARK in normal operation mode  |   |
| 2   | ➤ actuate magnetic element<br>(by approaching the programming magnet to the housing near the magnet sensitive element, remove after display shows “. .”)                      |   |
| 3   | after 3sec the right figure „d“ flashes   |   |
| 3b  | during this time:<br>➤ actuate magnetic element<br>(by approaching the programming magnet to the housing near the magnet sensitive element, remove after display shows “. .”) |   |
| 4   | Diagnostic menu will be selected  |  |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Shutdown criteria and display of diagnostic response
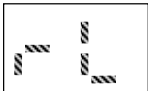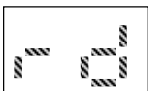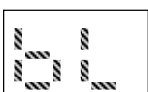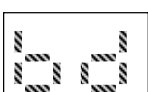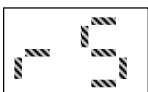
| parameter  | condition   | result  | display   |
|--|---|---|---|
| <b>„rL“ receiver low</b> <sup>1)</sup><br>warn threshold<br>receiver battery       | battery voltage<br>falls below warn<br>threshold for<br>minimum 5sec  | engine splutters<br>reaching half<br>maximum<br>allowed speed |    |
| <b>„rd“ receiver dead</b> <sup>1)</sup><br>shutdown threshold<br>receiver battery  | battery voltage<br>falls below<br>shutdown thres.<br>for minimum 3sec | engine shutdown   |    |
| <b>„bL“ battery low</b><br>warn threshold<br>main battery                          | battery voltage<br>falls below warn<br>threshold for<br>minimum 5sec  | engine splutters<br>reaching half<br>maximum<br>allowed speed |    |
| <b>„bd“ battery dead</b><br>shutdown threshold<br>main battery                     | battery voltage<br>falls below<br>shutdown thres.<br>for minimum 5sec | engine shutdown   |   |
| <b>„rS“ receiver<br/>signal</b> <sup>1)</sup><br>supervision of<br>receiver signal | receiver signal out<br>of the adjusted<br>range for<br>minimum 2sec   | engine shutdown   |  |

⇒ The valid input values of the shutdown or warning thresholds and the receiver signal shows the table „technical data“ (last page)

### PLEASE NOTE:

- After triggering a diagnostic function (shutdown of engine)
  - the display shows the failure
  - the ignition is deactivated
  - to continue operation the voltage supply of the POWER SPARK has to be interrupted and reapplied (reset)



<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

**a) Supervision of receiver signal<sup>1)</sup>**

activation and adjustment of the valid receiver signal range



The POWER SPARK can monitor the signal of a radio-control receiver. If the received signal is above or below the adjusted threshold values for more than 2 sec. the engine is shut down.

An appropriate signal for the supervision can be the „gas“-signal (to accelerate / slow down (reverse)). Alternatively any signal can be used (for example steering signal) or a signal that is exclusively reserved for supervision / shutdown.


sequence of programming: The POWER SPARK displays the adjusted values, afterwards it displays the actual measured value of the receiver signal for 10 seconds. Following the thresholds can be modified; in the last step the new values are confirmed.

Within this time window the display shows the actual signal value of the receiver. The nominal receiver signal range can be determined by moving the gas-poti at the remote control. To avoid an unintended shutdown of the engine caused by this diagnostic function a tolerance up to about 5-10% should be added (respectively subtracted) to the nominal values.

In the following example a signal range from „28“ – „73“ was determined. To avoid an unintended shutdown of the POWER SPARK, a tolerance value was added to the upper signal value respectively subtracted from the lower signal value.

=> The thresholds „25“ and „78“ have been chosen.

receiver signal

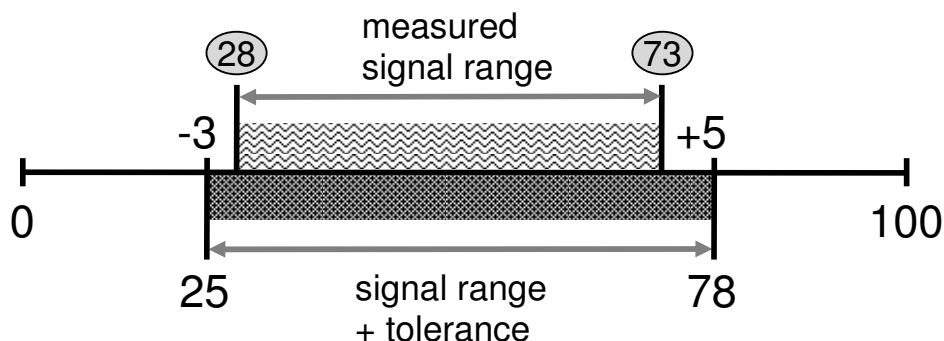


<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx


All trademarks are industrial property of the respective owners.

## FAILSAFE- and „KillSwitch“-functions

- **FAILSAFE:** The POWER SPARK can react with an engine shutdown to a FAILSAFE signal of the remote control system:
  - To enable this functionality a FAILSAFE-signal value outside the programmed threshold values of the POWER SPARK has to be programmed to the remote control system.

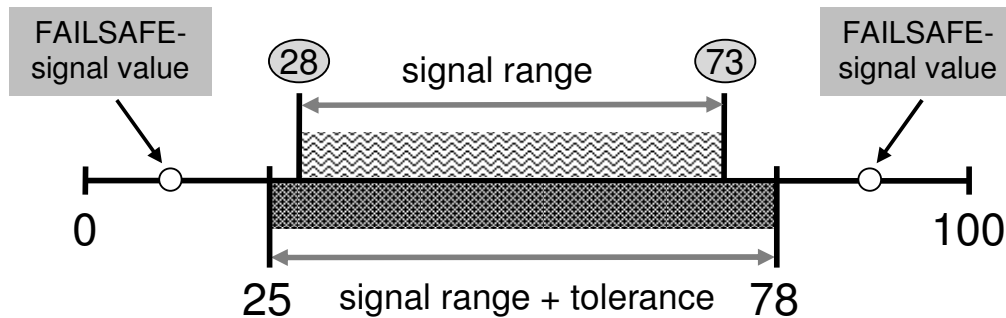

- **KILLSWITCH:** The POWER SPARK can act as a „KillSwitch“ and shut down the engine when a specific value of the receiver signal is reached:
  - Adjust the according threshold of the receiver signal to a value within the signal range of the desired shutdown criteria.
  - **Example: engine should shut down by actuating „backwards“**  
 A signal range of „28“ – „70“ was determined by pressing the gas-poti „accelerate forward“ on the remote.  
 A signal range of „70“ – „75“ was determined by pressing the gas-poti „slow down / reverse“ on the remote.  
 ➔ The upper threshold of the receiver signal supervision should be selected in a way that it is not reached unintended or by too small tolerances.  
 => here chosen: „73“

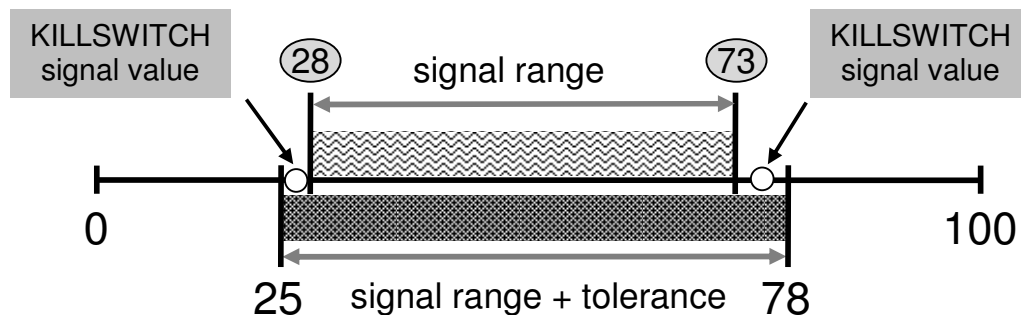

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx


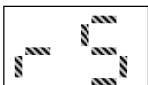
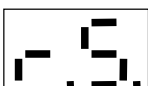
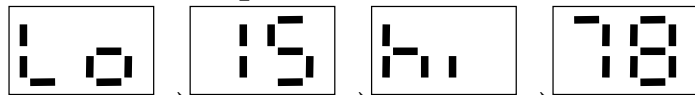





All trademarks are industrial property of the respective owners.



## Programming


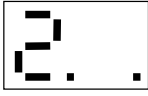


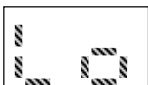

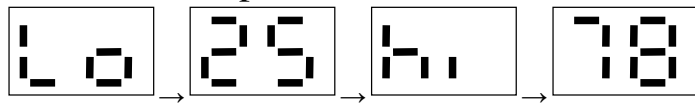

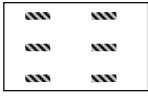
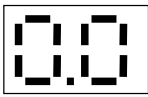
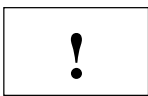
In the following example the limits „15“ and „78“ are selected.

- the lower limit should be changed to the value „25“.
- the upper limit should not be changed

| nr. | action   | display   |
|-----|--|---|
| 1-4 | ➤ select diagnostic menu   |    |
| 5   | ➤ wait until „rS“ flashes  |    |
| 6   | ➤ actuate magnetic element   |    |
| 7   | display shows the actual values of the lower and upper limit:<br>(here for example „lo“=15, „hi“=78)<br>  |    |
| 8   | in the following 10 seconds the actual value of the receiver signal is displayed<br>➤ during this time determine the lower and upper signal value of the receiver signal by moving the gaspoti in the end positions (on the remote-controller) |  |
| 9   | ➤ choose the values for the receiver signal supervision thoroughly (see introductory text)   |   |
| 10  | The selectable parameters flash one after another for 3 sec<br>- „lo“ (lower limit)<br>- „hi“ (higher limit)<br>lo → hi  |  |
| 11  | ➤ actuate magnetic element to select parameter for modifying<br>here: the lower limit „lo“ is selected   |  |
| 12  | Adjustable values flash one after another for 3sec (no, 0-9)   |  |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.
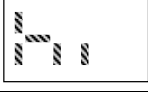
|     |   |   |
|-----|---|---|
| 12a | To disable this diagnostic function:<br>➤ actuate magnetic element  |    |
| 12b | To enable this diagnostic function:<br>➤ wait until the desired figure of the tens flashes (for example „2“)<br>➤ actuate magnetic element  |    |
|     | adjustable values of the unit position flash one after another for 3sec (0-9)   |    |
|     | ➤ wait until the desired figure flashes (for example „5“)<br>➤ actuate magnetic element   |    |
| 13  | The remaining selectable parameter (upper limit) „hi“ flashes for 3sec  |    |
| 13a | if the upper limit „hi“ should be changed:<br>➤ actuate magnetic element<br>⇒ (input as described in point 12   |    |
| 13b | if the upper limit „hi“ should not be changed:<br>➤ wait until the new values are displayed (in this example)   |   |
| 14  | display shows the new values of the lower and upper limit:<br>(here for example „lo“=25, „hi“=78)<br> |  |
| 15  | Display indicates that the new values are stored.   |  |
| 16  | POWER SPARK returns to the normal operation mode (display of engine speed and ignition standby)   |  |
| 17  | ➤ reset POWER SPARK, therefore disconnect and reconnect power supply  |  |

**PLEASE NOTE:**


- To deactivate the receiver signal supervision
  - set the upper or lower threshold to „no“
- To activate the receiver signal supervision
  - set the upper and lower threshold to valid values

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

**b) - e) Voltage monitoring**

activation and adjustment of warning or shutdown thresholds for supervision of main or receiver battery voltage

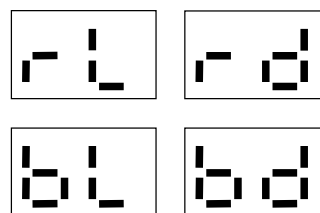

The following example shows exemplarily the deactivation / activation of the warning threshold for monitoring the voltage of the main battery. The adjustments of the other thresholds are identical.

| nr. | action   | display |
|-----|--|---------|
| 1-4 | ➤ select diagnostic menu   |         |
| 5   | ➤ wait until „bl“ flashes  |         |
| 6   | ➤ actuate magnetic element   |         |
| 7   | display shows actual voltage value (for example „4.5“)   |         |
| 8   | adjustable values flash one after another for 3sec (no, 0-9)   |         |
| 8a  | To disable this diagnostic function:<br>➤ actuate magnetic element   |         |
| 8b  | To enable this diagnostic function:<br>➤ wait until the desired figure of the tens flashes (for example „4“)<br>➤ actuate magnetic element |         |
| 9   | ➤ wait until the desired figure of the unit position flashes (for example „0“)<br>➤ actuate magnetic element                               |         |
| 10  | display shows the new voltage values (here „4.0“)  |         |
| 11  | Display indicates that the new value is stored   |         |
| 12  | POWER SPARK returns to normal operation mode (display of engine speed and ignition standby)  |         |

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.

## Technical data

| feature   | version             |          |                      |
|---|---------------------|----------|----------------------|
|   | RC-i 1x0            | RC-i 2x0 | RC-i 4x0             |
| number of cylinders   | 1                   | 2        | 3 & 4                |
| max. speed [rpm]  | 30000               |          |                      |
| accuracy of speed measurement                                 | +/- 1% (25°C)       |          |                      |
| power supply  | 4-12V <sup>3)</sup> |          |                      |
| detectable pulse width of receiver signal <sup>1)</sup>       | 0,8 .. 2,2ms        |          |                      |
| min. signal level of receiver signal <sup>1)</sup>            | 1,6V                |          |                      |
| warn threshold for low voltage main battery                   | 4..9,9V             |          |                      |
| shutdown threshold for low voltage main battery               | 4..9,9V             |          |                      |
| warn threshold for low voltage receiver battery <sup>1)</sup> | 2..9,9V             |          |                      |
| warn threshold for low voltage receiver battery <sup>1)</sup> | 2..9,9V             |          |                      |
| reverse polarity protection with fuse                         | 3A                  | 5A       | 10A                  |
| current consumption: <sup>4)</sup> 7500rpm                    | ≈0,5A               | ≈1,0A    | ≈2,0A                |
| energy 2: 6V 15000rpm   | ≈1,0A               | ≈2,0A    | ≈4,1A                |
| current consumption: <sup>4)</sup> 7500rpm                    | ≈0,4A               | ≈0,7A    | ≈1,4A                |
| energy 2: 9V 15000rpm   | ≈0,7A               | ≈1,3 A   | ≈2,7A                |
| current consumption: <sup>4)</sup> 15000rpm                   | ≈0,5A               | ≈1,1A    | ≈2,2A                |
| energy 2: 12V 30000rpm  | ≈1,1A               | ≈2,2A    | ≈4,4A                |
| dimensions [mm] (without flange)                              | 82 x 42             | 82 x 42  | 82 x 82              |
| dimensions [mm] (with flange)                                 | 110 x 42            | 110 x 42 | 110 x 82             |
| height [mm]   | 18                  | 18       | 18                   |
| hole pattern [mm]   | 100 x 32            | 100 x 32 | 100 x 72<br>100 x 36 |
| weight [g]  | ~100                | ~110     | ~195                 |



<sup>3)</sup> for multiple cylinders versions and high speed (>20000rpm) the supply should be min. 9V

<sup>4)</sup> current consumption has a strong dependency on ignition coil, spark plug an wiring cross section

<sup>1)</sup> Only receiver control versions RC-i x2x, <sup>2)</sup> only multiple cylinders versions RC-i 2xx & RC-i 4xx

All trademarks are industrial property of the respective owners.